



Installation Quick Start Guide for AQT-L1

Important Installation Instructions

- 1 Locate filter inside the refrigerator. Leave refrigerator door open during change out. Slowly turn the cartridge 1/4 turn to the left and remove.
- 2 Remove all packaging, apply date label as a reminder to replace the filter within 6 months and remove the red protective cap from the top.
- 3 Insert filter into refrigerator and turn 1/4 turn to the right - label in front. Do not overtighten.
- 4 Run water for 3 minutes through the dispenser to flush the filter. Open refrigerator door and check for leaks.
- 5 Reset the "replace filter" light. Refer to your refrigerator owner's manual for reset procedure.
- 6 Attach the included water filter replacement calendar label according to the label instructions.



Tested and Certified by NSF International against NSF/ANSI Standard 42 for materials and structural integrity requirements.

For further questions or assistance please call (866) 218-8473.
Monday - Friday 8am to 5pm Pacific Standard Time

WARNING

A newly-installed water filter cartridge may cause water to spurt from the dispenser until all the air is removed. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

Protect from freezing.

To reduce the risk of property damage due to water leakage, this filter MUST be installed in accordance with the manufacturer's specifications and instructions. This filter must be replaced every 6 months, at the rated capacity, or sooner if reduced water flow occurs. Failure to follow instructions and operation specifications will void your warranty. Further, manufacturer assumes no responsibility or liability for damages arising out of misuse of the product. The filter bypass plug MUST be used when a filter replacement cartridge is not installed.

The risk associated with small parts can cause choking if swallowed. Keep children away from small parts during the replacement of the water filter.