



Installation Quick Start Guide for AQT-L2

Important Installation Instructions

1 Twist the old filter a quarter-turn counterclockwise.



2 Pull the filter straight out and discard.

3 Push the new filter into the fridge until it stops.



4 Twist the filter a quarter-turn clockwise.



5 Run water from the dispenser for 5 minutes at .5 gpm (about 2½ gallons) to clear the system and prevent sputtering.



6 Check filter for any leaks. If leaks are detected, uninstall and reinstall the filter as instructed above.



7 Reset the "replace filter" light. Refer to your refrigerator owner's manual for reset procedure.



8 Attach the included water filter replacement calendar label according to the label instructions.

**For further questions or assistance please call (866) 218-8473.
Monday - Friday 8am to 5pm Pacific Standard Time**

WARNING

A newly-installed water filter cartridge may cause water to spurt from the dispenser until all the air is removed. Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.

Protect from freezing.

To reduce the risk of property damage due to water leakage, this filter MUST be installed in accordance with the manufacturer's specifications and instructions. This filter must be replaced every 6 months, at the rated capacity, or sooner if reduced water flow occurs. Failure to follow instructions and operation specifications will void your warranty. Further, manufacturer assumes no responsibility or liability for damages arising out of misuse of the product. The filter bypass plug MUST be used when a filter replacement cartridge is not installed.

The risk associated with small parts can cause choking if swallowed. Keep children away from small parts during the replacement of the water filter.